



Call2Prayer Kids

Customer & Parent Instructions

Getting Started

Thank you for purchasing Call2Prayer Kids, a little companion created to help children build a joyful connection with prayer, Quran and everyday Islamic learning. To get started, connect it to power, switch it on and scan the QR code displayed on the device. Follow the on-screen instructions to connect Call2Prayer Kids to your home WiFi network. **Please note: Call2Prayer Kids supports 2.4 GHz WiFi networks only.**

Warranty

Call2Prayer Kids includes a **3-month warranty** from the date of purchase.

SD Card Warranty

The included SD card has a **1-month warranty** from the date of purchase.

Important Parent Recovery Instructions

Forgotten Parent Password

Power on Call2Prayer Kids. As soon as the Call2Prayer logo appears, hold the physical volume button continuously for **15 seconds**. This clears only the parent username and password. The Parent Portal will then ask you to create a new login. Wi-Fi, prayer times, child name, alarms and all other settings remain unchanged.

Factory Reset

Open the **Parent Portal** and go to **Reset**. Enter the parent password, select **Reset Call2Prayer Kids**, then confirm the warning. This clears the parent login, Wi-Fi, Azan choices, alarm, volume and saved settings. Call2Prayer Kids will restart ready to be set up again.

Using Call2Prayer Kids

- 1. Home:** Shows the time, next prayer, battery and audio progress when Quran or Azan is playing.
- 2. Page Navigation:** Swipe left or right to move between pages. Tap three times near the top on any device page to return Home.
- 3. Prayer Tracker:** When your child completes their prayer, they tick it on the device to let you know they have prayed and at what time. A prayer cannot be marked before its scheduled time. After praying, the child taps the matching tick and holds the confirmation button.

Prayer tick chances: The child receives two confirmation chances per prayer each day. A confirmed mark can be undone on the device within 15 seconds. After that, only the parent can press **Reset Ticks** in the Azan page to clear the mark and restore both chances.

Prayer, Learning & Daily Use

- 4. Azan:** The parent selects the Azan for Fajr, Zohr and Maghrib each day.
- 5. Quran:** Select the Qari and Surah, then use play, pause and stop. Audio continues while moving around the device.
- 6. Good Deeds:** The child can tick daily good deeds on the device. The Parent Portal shows which deeds have been ticked today and which are still waiting.
- 7. Tasbih:** Tap the counter to count tasbih. Reset clears the current count.
- 8. Short Duas:** The child can read short duas with Arabic, transliteration and meaning.
- 9. Stories and Islam:** The child can open topics and stories to read or listen where audio is available.
- 10. Quiz:** The Quiz page asks questions based on the Stories and Islam pages. Children can use it to test what they have learned and try again to improve their score.

Parent Tip

The Good Deeds and Prayer Tracker pages are designed to help parents encourage consistency. Review progress together and use the portal controls whenever a confirmed prayer tick needs correcting.

Settings & Parent Portal

11. Settings: The device settings page has volume, brightness and the QR code for the Parent Portal.

12. Portal Address: Each Call2Prayer Kids has its own address, such as **c2p-kids-2293c8.local**. Use this address on phones and computers connected to the same Wi-Fi. If it does not open on a particular phone or router, scan the QR code once and use the IP address shown as the backup.

13. Physical Buttons: The physical button on the left side controls volume. Press it once for volume up and press it twice for volume down. The physical button on the right side is the power button used to turn Call2Prayer Kids on and off.

14. Parent Portal: Use the portal to upload prayer times, choose Azans, set alarms, manage custom audio and review daily good deeds.

15. Battery Estimate: The battery percentage shown in the Parent Portal and on Call2Prayer Kids is an estimate based on battery voltage. It may not always match the exact real charge level. While charging, it can remain around 98% or 99% for some time before reaching full.

Reset Wi-Fi Only

To clear only the saved Wi-Fi network, open **Reset** in the Parent Portal, enter the parent password and select **Reset WiFi**. The parent login remains unchanged and the device restarts in Wi-Fi setup mode.

A little companion for a lifetime of faith.